
 
 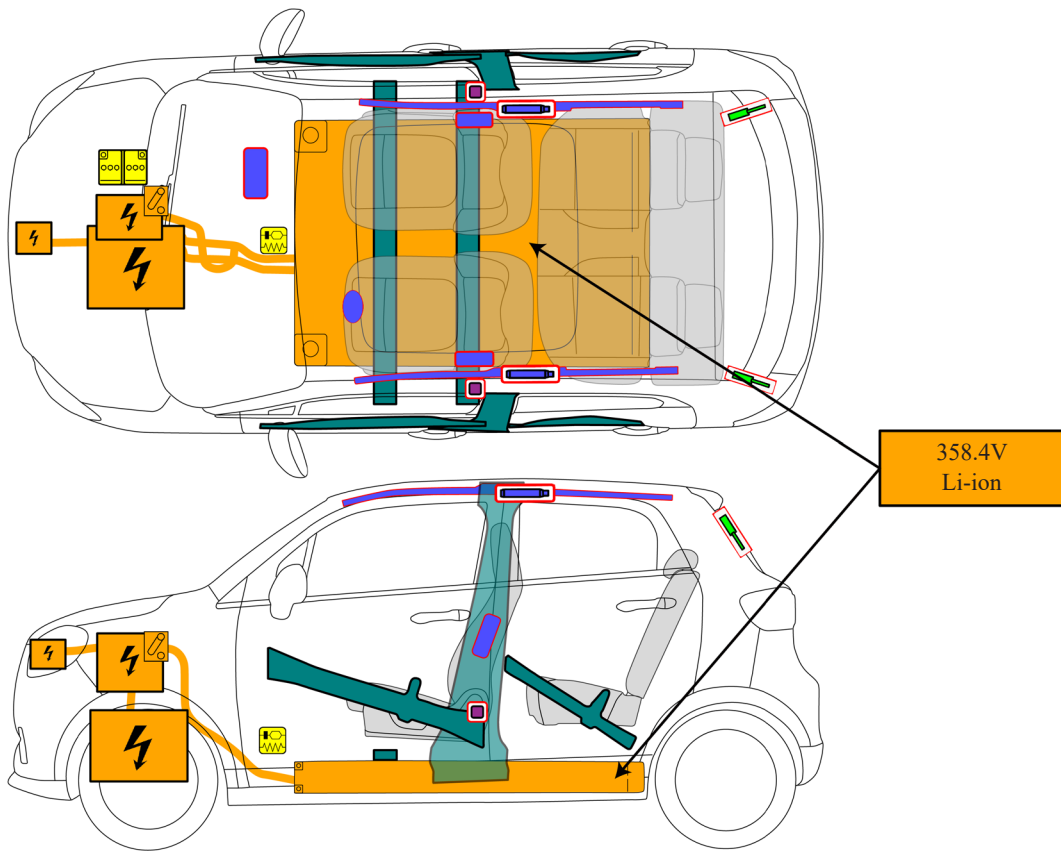
 







	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit
	Battery low pressure		Gas strut / Preloaded spring		High strength zone		High-voltage component
	High voltage power cable		High voltage device that disconnects high voltage		Battery pack, high-voltage		

1. Identification / recognition



LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF. SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN. WEAR APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT.

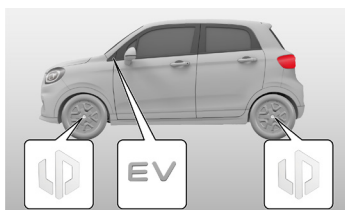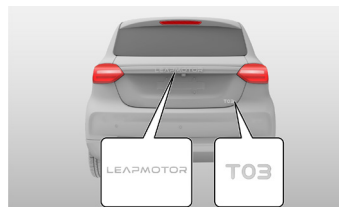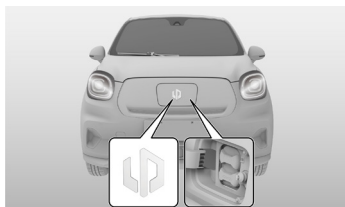


2. Immobilisation / stabilisation / lifting

A. Fixing the vehicle:




1. Step on the brake pedal to bring the vehicle to a smooth stop, then switch to P gear. Apply parking brake, press the push-button start button, and power off the vehicle by locking the vehicle from outside.

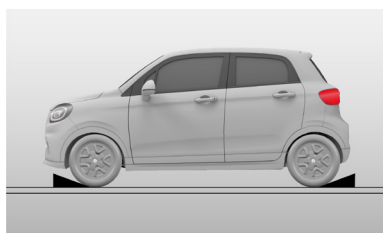

2. After parking the vehicle, place wedges in front of and behind all four wheels.

B. Vehicle lifting points:

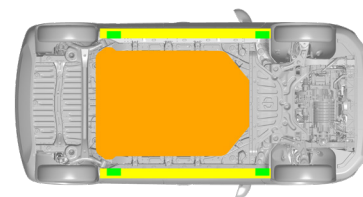



■ Safe lifting point
■ Side safety lifting point
■ Traction battery

3. Disable direct hazards / safety regulations





Wear appropriate PPE (rubber insulating gloves/insulated rubber shoes/tools with insulating protective sleeve/goggles). Do not attempt to open the traction battery.

Main disabling method

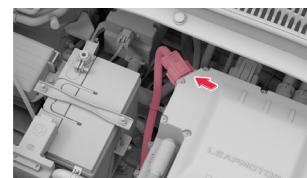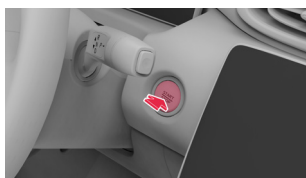


Access to 12V battery

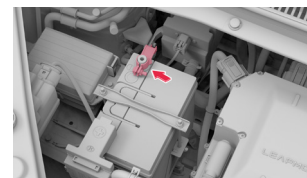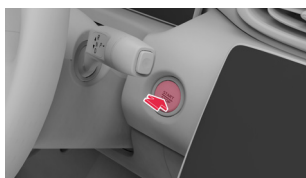





4. Access to the occupants

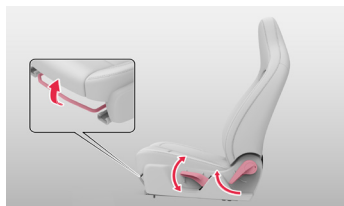


Driver seat adjustment

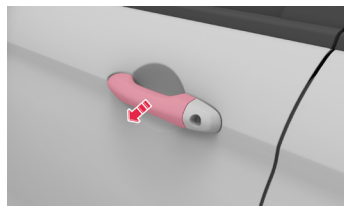


Exterior door handle

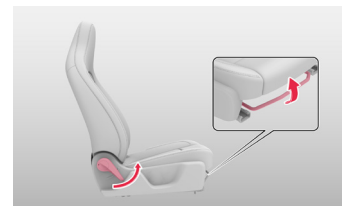

Front passenger seat adjustment

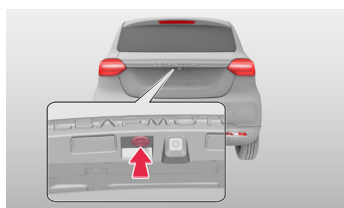

Open the boot

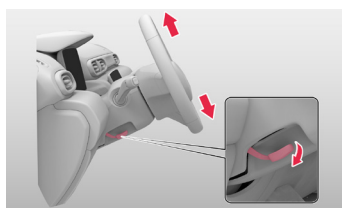

Steering wheel adjustment




Interior door handle

Glass type


The front windshield is laminated glass, while the rest are tempered glass.

- ① Laminated glass
- ② Tempered glass

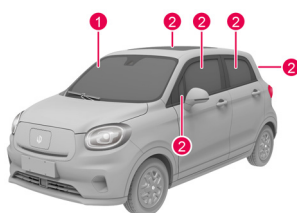


Body high strength zone

The high strength zone is indicated in cyan.

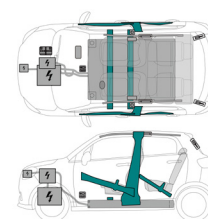

 5. Stored energy / liquids / gases / solids

							12V
							358.4V
							475 ± 20g




When the coolant leaks from a battery pack, it can become unstable, posing a risk of thermal runaway. Check the battery pack temperature with a thermal infrared camera.



6. In case of fire



Use water to extinguish the fire

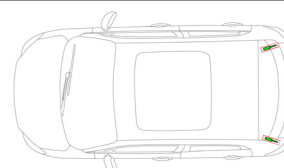

Explosive risk for gas strut / Preloaded spring!



**TRACTION BATTERY
RE-IGNITION!**



**Do not submerge the vehicle in water to extinguish
the burning battery.**



7. In case of submersion

Wear appropriate personal protective equipment. After removing the vehicle from the water, safely cut off high voltage power as outlined in Chapter 3. Vehicles submerged in salt water poses a greater risk of a traction battery fire.


Tilt the vehicle to one side to allow water to drain out of the vehicle and the traction battery.

8. Towing / transportation / storage


KEEP A SAFE DISTANCE FROM OTHER VEHICLES!




**TRACTION BATTERY
RE-IGNITION!**

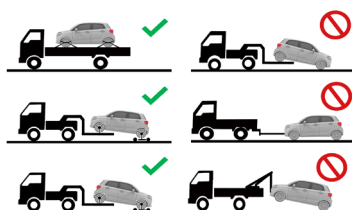

Vehicle transportation

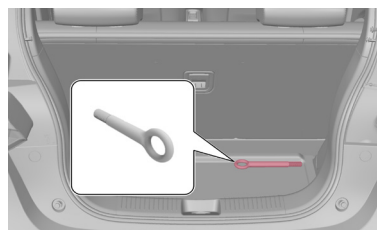

Towing hook storage position

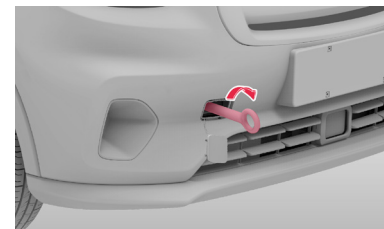

Towing hook installation position

9. Important additional information

Name of manufacturer: Leapmotor Automobile Co., Ltd.

For more information, please refer to *Emergency Response Guide*: (<https://www.leapmotor.com/global/assistance>)

10. Explanation of pictograms used

	Warning, Electricity		Flammable
	General warning sign		Hazardous to the human health
	Air-conditioning component		Acute toxicity
	Electric vehicle		Corrosive
	Bonnet		Explosive
	Use water to extinguish the fire		
	Use thermal infrared camera		