








	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit
	Battery low pressure		Gas strut / Preloaded spring		High strength zone		High-voltage component
	High voltage power cable		Fuse box that disables high voltage		Battery pack, high-voltage		Fuel tank

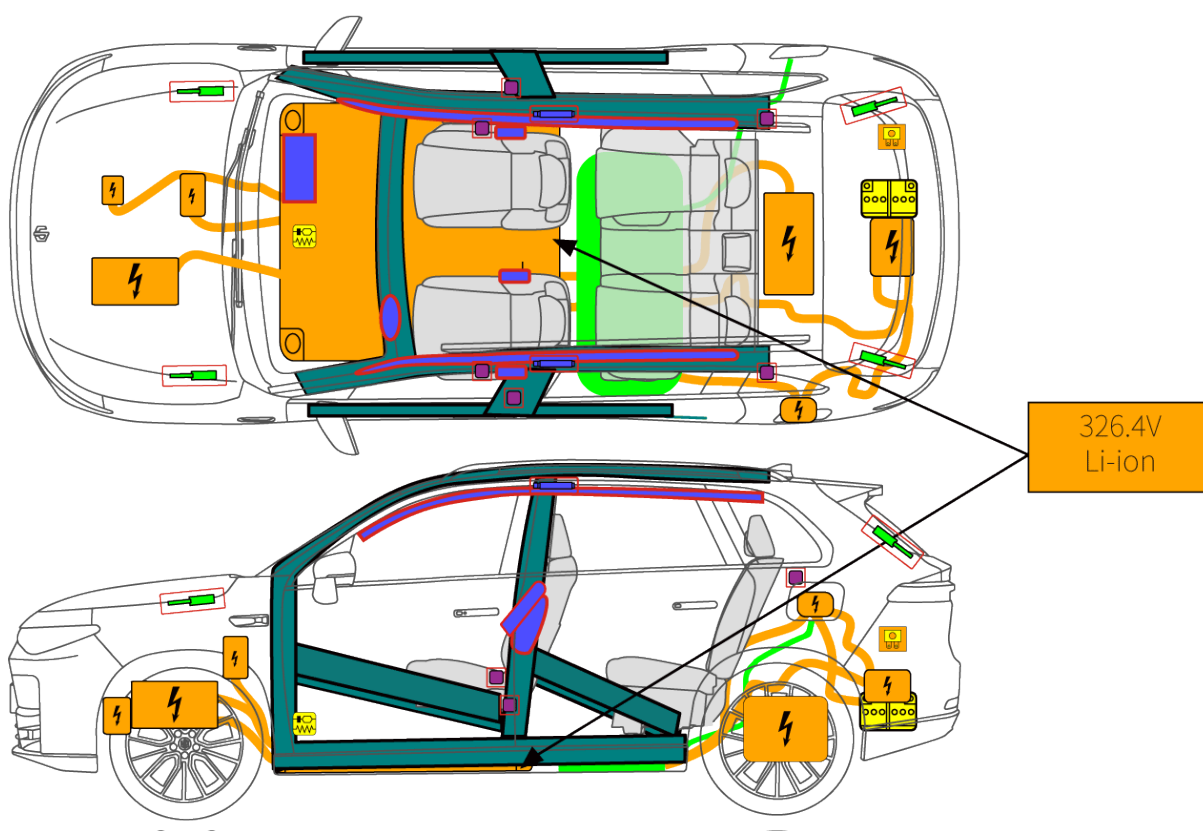

1. Identification / recognition



Lack of engine noise does not mean vehicle is off. Please wear appropriate personal protective equipment.

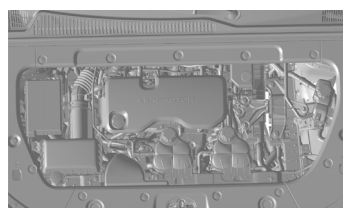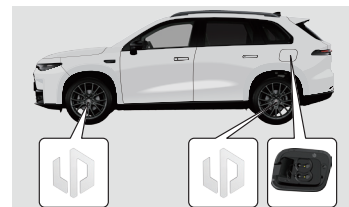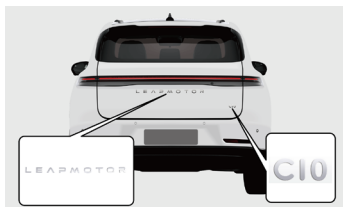

2. Immobilisation / stabilisation / lifting

A. Fixing the vehicle:




1. Step on the brake pedal to bring the vehicle to a smooth stop, then shift the gear to P gear.



2. After the vehicle is parked, place chocks in front and behind all four wheels.

B. Vehicle lifting points:

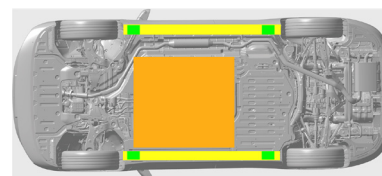

Safe lifting point
Side safety stabilizing point
Traction battery




3. Disable direct hazards / safety regulations






Wear appropriate PPE (rubber insulating gloves/insulated rubber shoes/tools with insulating protective sleeve/goggles).

Do not attempt to open the traction battery.

Main disabling method

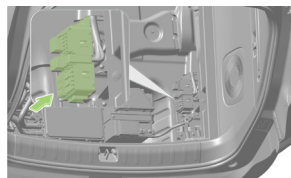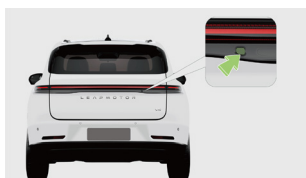

Access to 12V battery

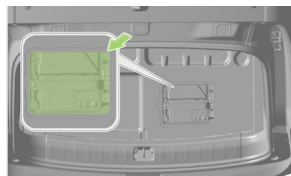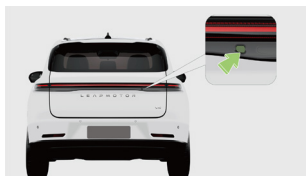




4. Access to the occupants




Driver seat adjustment



Exterior door handles

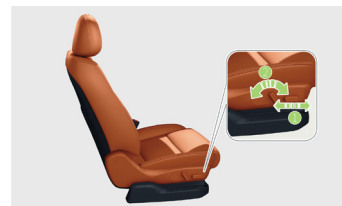

Front passenger seat adjustment

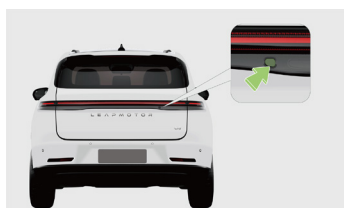

Open the boot



Steering wheel, tilt control




Interior door handle

Glass type


The front windshield is laminated glass, while the rest are tempered glass.

- ① Laminated glass
- ② Tempered glass

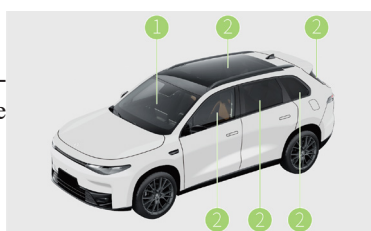

Body high strength zone

The high strength zone is indicated in blue below.

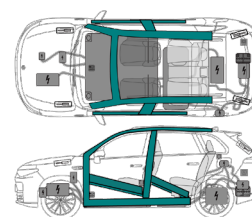

5. Stored energy / liquids / gases / solids

							50L
							12V
							326.4V
							620 ± 20g





When the coolant leaks from a battery pack, it can become unstable, posing a risk of thermal runaway. Check the battery pack temperature with a thermal infrared camera.



6. In case of fire



Use water to extinguish the fire.



Explosive risk for gas strut / Preloaded spring of bonnet and liftgate!



BATTERY RE-IGNITION!



Do not submerge the vehicle in water to extinguish the burning battery.



7. In case of submersion

Wear appropriate PPE. Remove the vehicle from the water and continue with normal high voltage(see chapter 3). Vehicles submerged in salt water should be handled with a greater potential risk of a HV battery fire.


Tilt the vehicle to one side to allow water to drain out of the vehicle and the high voltage battery.

8. Towing / transportation / storage


STORE AT SAFE DISTANCE FROM OTHER VEHICLES!



BATTERY RE-IGNITION!

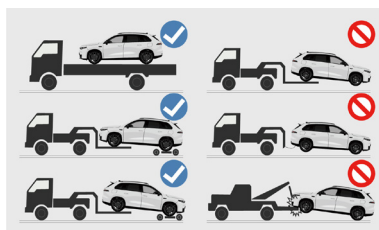

Vehicle
transportation

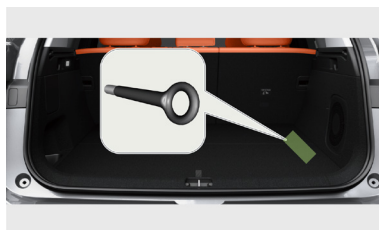

Towing hook
storage position



Towing hook
installation position

9. Important additional information

Name of manufacturer: Leapmotor Automobile Co., Ltd

For more information, please refer to the Emergency Response Guide (<https://www.leapmotor.net/assistance>)

10. Explanation of pictograms used

	Warning, Electricity		Flammable
	General warning sign		Hazardous to the human health
	Air-conditioning component		Acute toxicity
	Hybrid Electric Vehicle on fuel of liquid group 2		Corrosives
	Boot		Explosive
	Use water to extinguish the fire		Use thermal Infrared camera